

BEADBAZOOKA®

Gaither PROFESSIONAL EQUIPMENT

New 2" BEAD BAZOOKA®

Gaither's BB3L2 / BB6L2 / BB10L2

More Power & More Speed




Gaither Tool Company, Inc.
2255 W. Morton Ave
Jacksonville, IL 62650, USA
T 217-245-0545 / 800-452-5010
F 217-245-0940
E sales@gaihertool.com
W www.gaihertool.com

Gaither Europe B.V.
Rechtzaad 6
4703 RC Roosendaal
Netherlands
T +31 165 554475

E pm@gaithereurope.com

Original instructions

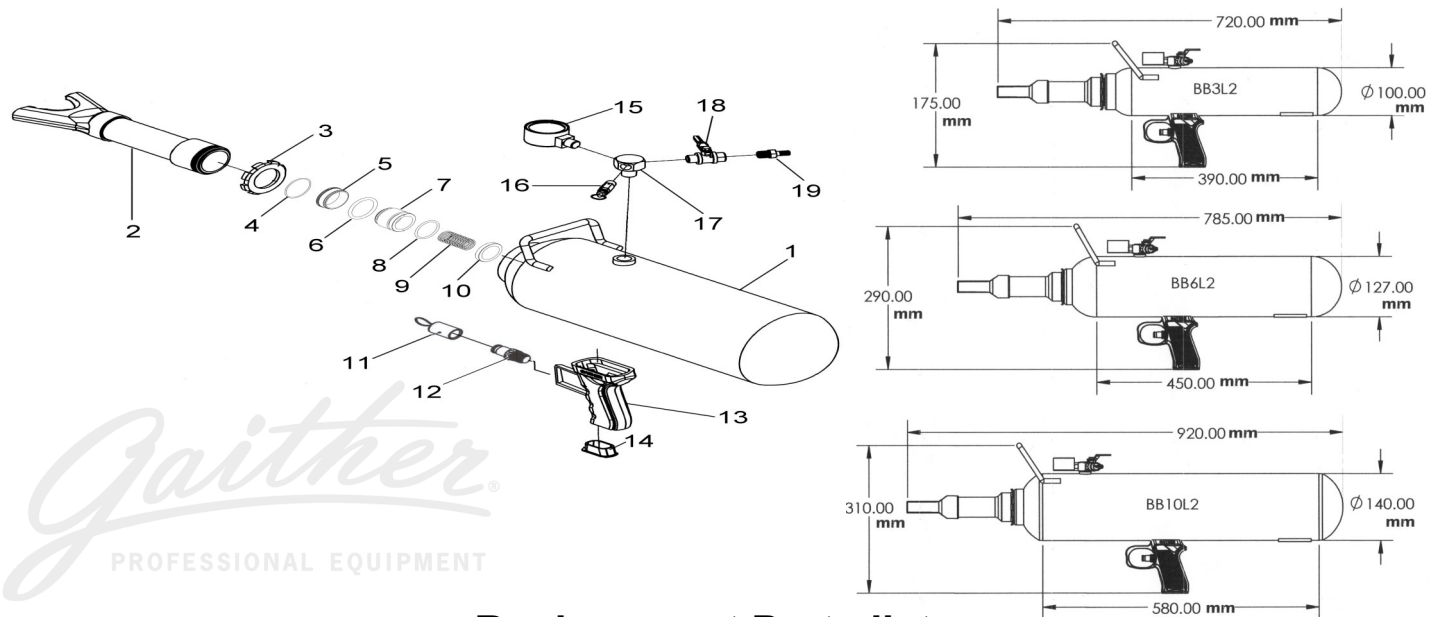

Replacement Parts list

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>
1.	12910B2	Air Tank (3L, 6L, 10L)
2.	12913B2C	Slotted Barrel w/ 2" Connector
3.	12912B2	(50.8 mm) 2" Lock Nut
4.	12950	2" W 1.7 O-Ring
5.	12951	2" Wide Screw
6.	12952	2" W 5.3 O-Ring
7.	12953	2" Piston-L40mm
8.	12954	2" W 3.5 O-Ring
9.	12955	Stainless Spring
10.	12956	2" W 11.2 O-Ring
11.	12919BS	Safety Trigger Caps
12.	12919B	Switch Valve
13.	12920B	Grip-BB
14.	12921B	Plastic Plug
15.	12914B	1.5" Pressure Gauge -10Bar
16.	12917B	CE Safety Valve -Max 10Bar
17.	12930M	F ¼" x3 & M ¼"x1 Connector
18.	12916B	(6.35 mm) ¼"PT Intake Valve
19.	12927	Universal Connector

CAUTION:

- It is best to use clean / filtered compressed air to fill all Bead Bazooka® / Bead Booster® inflation tools.
- Unfiltered or unclean compressed air may result in poor performance and shorten the life of the product.
- Gaither recommends this Bead Bazooka® tank be replaced after 5 years.
- When not using , Please put the Safety Trigger Caps back onto the Switch Valve



Bead Bazooka® Accessories

A.	GB-51	KD-Tire Stand
B.	GB-52	Air-Whip Hose
C.	GB-53	Tire Wedge
D.	GB-54	Safety Pack –goggles & ear plugs
E.	GB-56	Wide Wall Clip w/4 screws


New 2" Bead Bazooka® Repair kit



BBVRK

F.	12958	2" Piston w/ O-Ring
G.	12959	Gaither Wrench
H.	12950	W 1.5 O-Ring



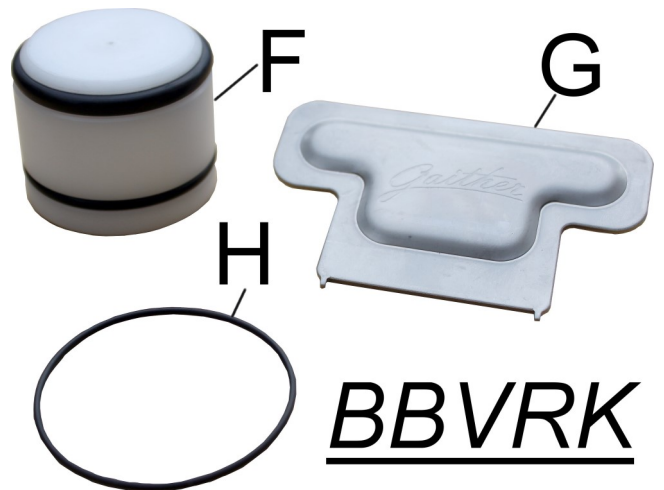



The Bead Bazooka® Valve Repair Kit, or BBVRK, is a new tool that lets the user repair/replace the piston/valve of the Bead Bazooka®. The BBVRK is intended to extend the lifespan of the Bead Bazooka® by making the Bead Bazooka® fully serviceable. This kit saves the user precious time because the repairs can be done quickly and effectively in house.



BBVRK



Replacement Parts list

12916B ¼"PT Intake Valve 	12914B 1.5" Pressure Gauge 	12930M G Connector 
12927 Universal Connector 	12917B CE Safety Valve 	12913B2C Slotted Barrel w/ 2" Connector 




Every Bead Bazooka® includes a wall Clip(GB-56) that can be placed on the work shop wall with simple wood or metal screws: (For safe storage always return the Bead Bazooka® back to its wall clip storage position)



DO NOT PLACE THE BARREL FIRMLY AGAINST THE RIM,

but instead it should be held 2-3" away from the wheel flange when firing for better overall lift and performance

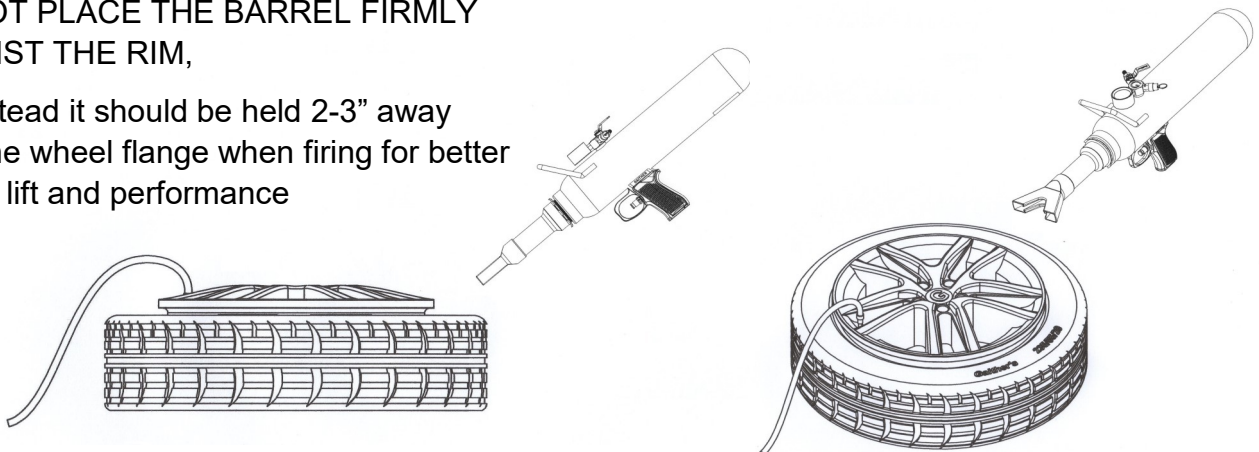

CAUTION:

AFTER THE BEAD HAS BEEN SET TO THE WHEEL, STOP THE AIR FLOW TO THE VALVE STEM, PLACE A VALVE CORE IN THE STEM, AND MOVE THE TIRE / WHEEL ASSEMBLY TO A TIRE INFLATION CAGE AND THEN CONTINUE INFLATING TO THE MANUFACTURER'S RECOMMENDED OPERATING PRESSURE.

WARNING:

COMPRESSED AIR IS DANGEROUS - ALWAYS WEAR EYE AND EAR PROTECTION. ALWAYS FOLLOW THE INSTRUCTIONS GIVEN ABOVE. THE BEAD BAZOOKA® IS A TOOL FOR THE TIRE INDUSTRY AND SHOULD NEVER BE USED OTHERWISE. THIS TOOL IS NOT A GUN. THIS TOOL IS NOT A TOY AND SHOULD NEVER BE USED FOR ANYTHING EXCEPT ITS SPECIFIED USE.

Note:



DO NOT DROP


Drop damage could void your warranty!

For other trouble shooting issues and maintenance suggestions for your new Bead Bazooka®, as well as tips for problematic tires, please log on to www.gaithertool.com


Gaither New 2" Bead Bazooka® Repair kit

BBVRK		
F.	12958	2" Piston-40mm w/ O-Ring
G.	12959	2" Gaither Wrench
H.	12950	2" W 1.7 O-Ring

The Bead Bazooka® Valve Repair Kit, or BBVRK, is a new tool that lets the user repair/replace the piston/valve of the Bead Bazooka®. The BBVRK is intended to extend the lifespan of the Bead Bazooka® by making the Bead Bazooka® fully serviceable. This kit saves the user precious time because the repairs can be done quickly and effectively in house.

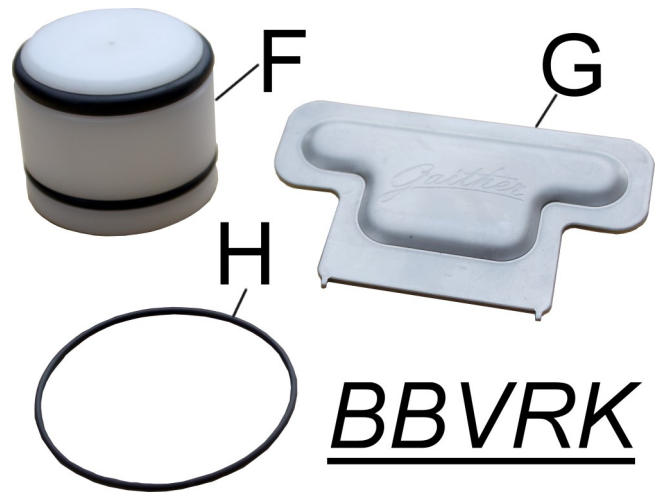

How To Use BBVRK

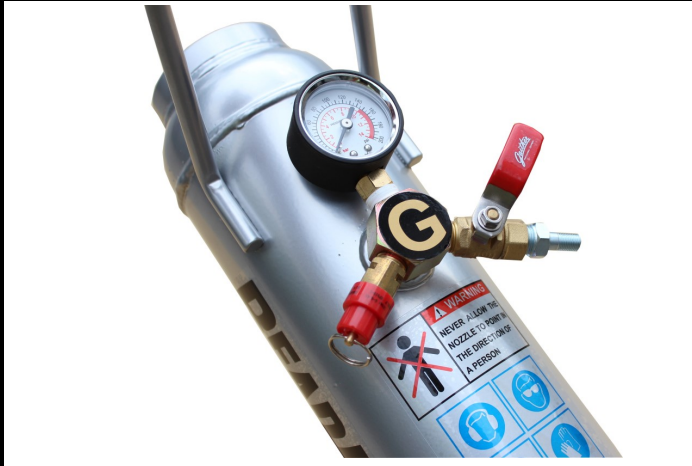


1. Check the Pressure Gauge
No Air - 0 bar. / 0 psi.



2. Bead Bazooka® place the wall clip storage position



3. Use G / Gaither Wrench

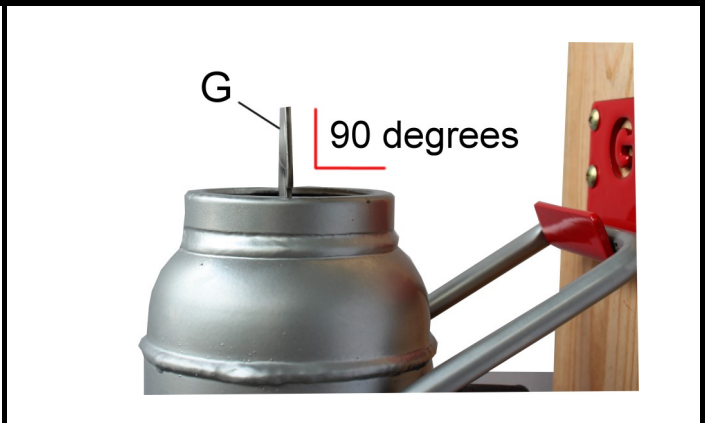

4. Right angle 90 degrees

A



B



Use WD-40
Wait 2~3 minutes

A



B



C



5. Press down with your left hand.

Turn counterclockwise with your right hand



6. Replace F & H after opening



Note:

For other trouble shooting issues and maintenance suggestions for your new Bead Bazooka®, as well as tips for problematic tires, please log on to

www.gaithertool.com

