


## Parts Breakdown

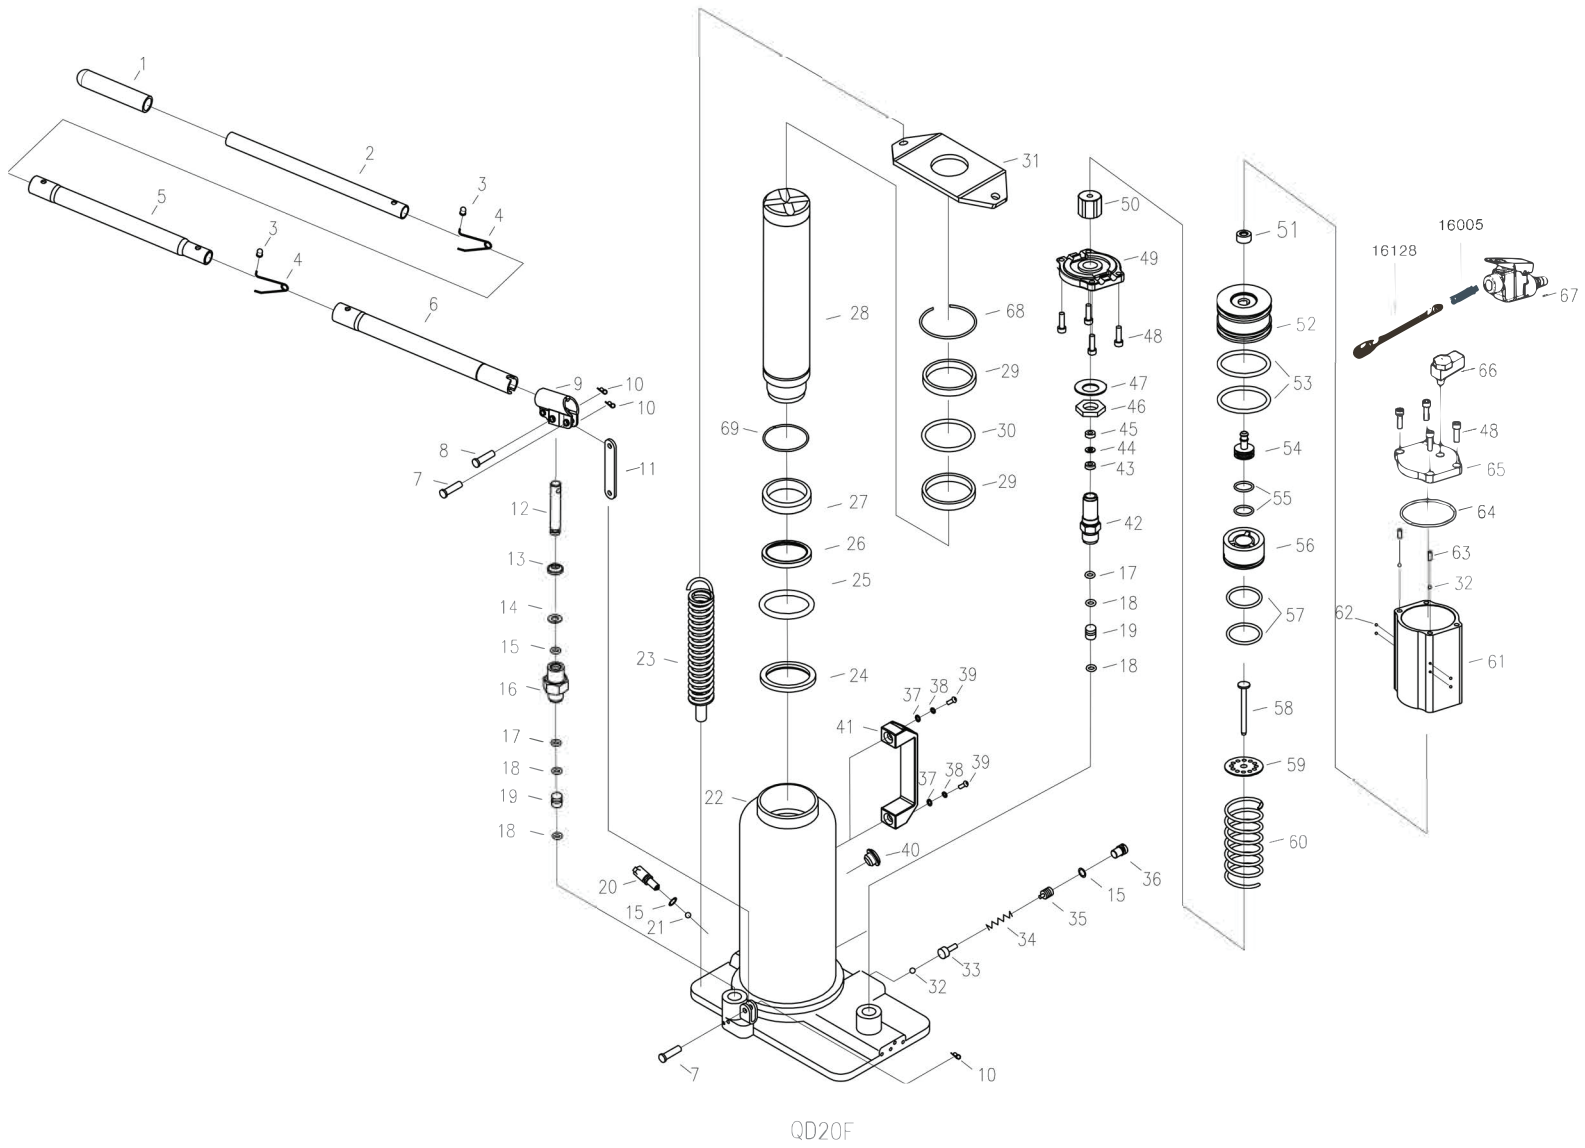

## Parts Breakdown

### PARTS LIST

Item #	Description	Qty
14455-01	Handle Grip	1
14455-02	Lower Handle	1
14455-03	Press Button	2
14455-04	Spring Clip	2
14455-05	Middle Handle	1
14455-06	Upper Handle	1
14455-07	Link Pin	2
14455-08	Pump Core Pin	1
14455-09	Handle Socket	1
14455-010	Pin	3
14455-011	Linking Rod	1
14455-012	Pump Core	1
14455-013	Dust Proof Ring	1
14455-014	Snap Ring	1
14455-015	O-Ring	3
14455-016	Pump Core	1
14455-017	Nylon Collar	2
14455-018	Cooper Washer	4
14455-019	Oil Valve Body	2
14455-020	Oil Valve Rod	1
14455-021	Steel Ball	1
14455-022	Welded Base	1
14455-023	Spring	2
14455-024	Piston Snap Ring	1
14455-025	O-ring	1
14455-026	Washer	1
14455-027	Piston Ring	1
14455-028	Piston	1
14455-029	Snap Ring	2
14455-030	O-ring	1
14455-031	Spring Lid	1
14455-032	Steel Ball	3
14455-033	Ball Valve Seat	1
14455-034	Spring	1
14455-035	Adjusting Screw	1

Item #	Description	Qty
14455-036	Seal Bolt	1
14455-037	Washer	2
14455-038	Washer	2
14455-039	Bolt	2
14455-040	Oil Plug	1
14455-041	Carrying Handle	1
14455-042	Air Motor	1
14455-043	Seals	1
14455-044	Nylon Collar	1
14455-045	Bushing	1
14455-046	Bolt	1
14455-047	Spring	1
14455-048	Bolt	8
14455-049	Cover Board	1
14455-050	Bolt	1
14455-051	Air Plug	1
14455-052	Piston Cover	1
14455-053	O-ring	2
14455-054	Air Shuttle Valve	1
14455-055	O-ring	1
14455-056	Piston Core	1
14455-057	O-ring	1
14455-058	Piston Core	1
14455-059	Pump Core Gasket	1
14455-060	Spring	1
14455-061	Cylinder Housing	1
14455-062	Steel Ball	4
14455-063	Plug	2
14455-064	O-ring	1
14455-065	Rear Cover	1
14455-067	Air Valve Assembly	1
14455-068	Steel Wire Ring	1
14455-069	Limited Ring	1
16128	Air Hose Assy	1
16006	Air Reducer 1/4in NPT	1