



92250

OTR LARGE O-RING INSTALLER

OTR Large O-Ring Installer

- Installs and removes O-Rings on OTR Tires 25"-36"
- Assists in the removal/installation of the lock ring as well



2347 Circuit Way
Brooksville, FL 34604
352.799.1111 - sales@ameintl.net



www.ameintl.net